
## **Headlights**


#### ▶ Type A






- The headlight, side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on/off automatically.
- The side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on.
- The headlights and all the lights listed above (except daytime running lights) turn on.
- 4 OFF The daytime running light turn off.

### ▶ Type B





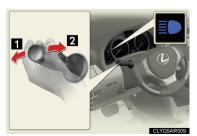


- 1 O The daytime running lights turn on.
- 2 AUTO The headlight, side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on/off automatically.
- The side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on.
- The headlights and all the lights listed above (except daytime running lights) turn on.
- To engage the high beams, push the lever forward.
- **2** To flash the high beams temporarily, pull the lever toward you.

# Windshield Wipers and Washer

### ■ Intermittent wiper with interval adjuster (if equipped)





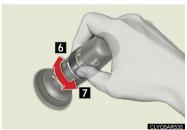



- 1 OFF Off
- 2 INT Intermittent wiper operation
- 3 LO Low speed wiper operation
- 4 High speed wiper operation
- 5 MIST Temporary operation

Intermittent wiper operation: Wiper interval can be adjusted by turning the ring.

- 6 Increases the intermittent windshield wiper frequency
- **7** Decreases the intermittent windshield wiper frequency

To spray washer fluid, pull the lever. The wipers will operate automatically.

### ■ Rain-sensing windshield wipers (if equipped)

#### ▶ Type A



- OFF Off
  AUTO Rain-sensing wiper operation
  LO Low speed wiper operation
  HI High speed wiper operation
  MIST Temporary operation
- 5 1 2 3 4 CLYOSAR523

### ▶ Type B





- 1 O Off
- 2 AUTO Rain-sensing wiper operation
- 3 Low speed wiper operation
- 4 High speed wiper operation





Rain-sensing wiper operation: the sensor sensitivity can be adjusted by turning the switch ring.

- 6 Sensor sensitivity (high)
- 7 Sensor sensitivity (low)

To spray washer fluid, pull the lever. The wipers will operate automatically.

# Rear Window Wiper and Washer

#### ▶ Type A





2 INT Intermittent window wiper operation


3 ON Normal window wiper operation

4 Washer/wiper dual operation

5 Washer/wiper dual operation



### ► Type B





2 --- Intermittent window wiper operation

3 — Normal window wiper operation

4 Washer/wiper dual operation

5 Washer/wiper dual operation

